



7"/10" Color Changing LED Flood


Light Color Selection Supplemental Instructions

Note: This fixture has been enabled with a Color Selection Lock Mode to prevent unintentional color change and will arrive in the Locked Mode and preset to 4000K Color Temperature. After installation the fixture must be unlocked to select the desired color temperature and will then relock after 30 minutes.

Steps to Unlock and Set Color Temperature

Once the fixture has been installed and main power has been restored:

- 1) With the wall switch starting in the off position and within 1.5 to 2.0 seconds, toggle the switch on-off-on. This will unlock the color selection feature.
- 2) Once step 1 has been completed, simply touch the One Touch Color Selector button to select desired color temperature. This fixture can be set at 3000K (Warm) /4000K (Cool) /5000K (Daylight). Each touch of the button will move the color temperature to the next successive color.
- 3) Once the desired color temperature is set, you are done. The Color Selection Lock Mode will resume in 30 minutes and your selected color temperature will return whenever the fixture is turned on.
- 4) If you need to change the color temperature after 30 minutes have passed, simply repeat this process.

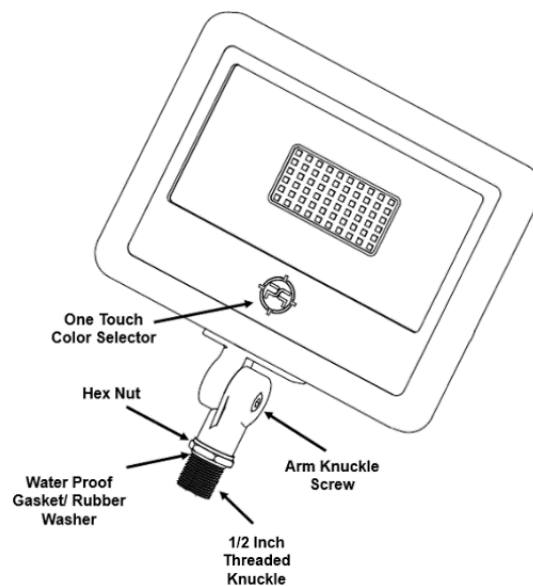

To view the Color Selection Process video, please visit:

www.precisioncp.com